




## SIGN PUNCHING, STRINGER AND SUPPORT LOCATION DETAILS - ROUTE MARKER SIGNS

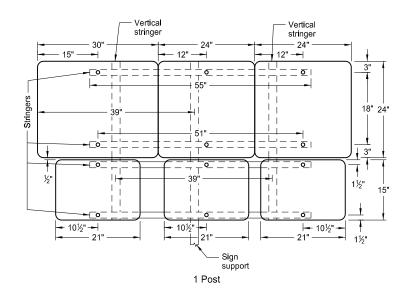


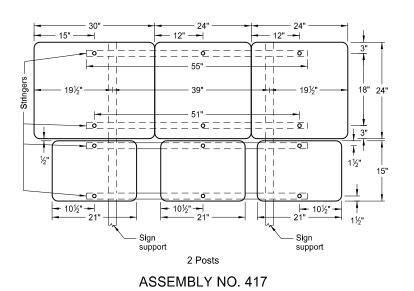

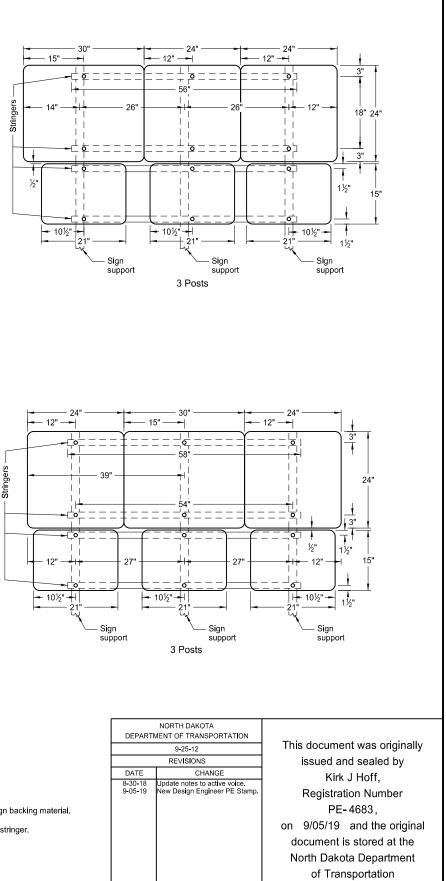

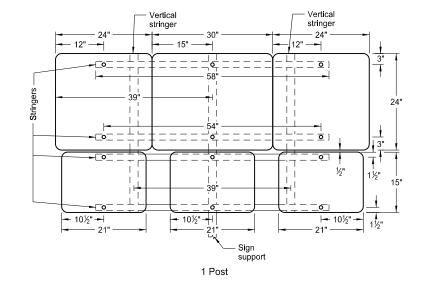

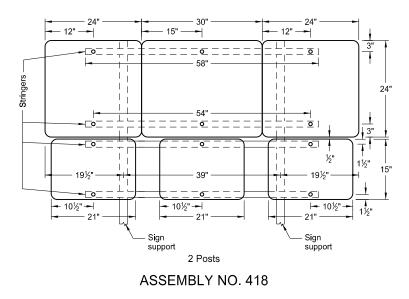

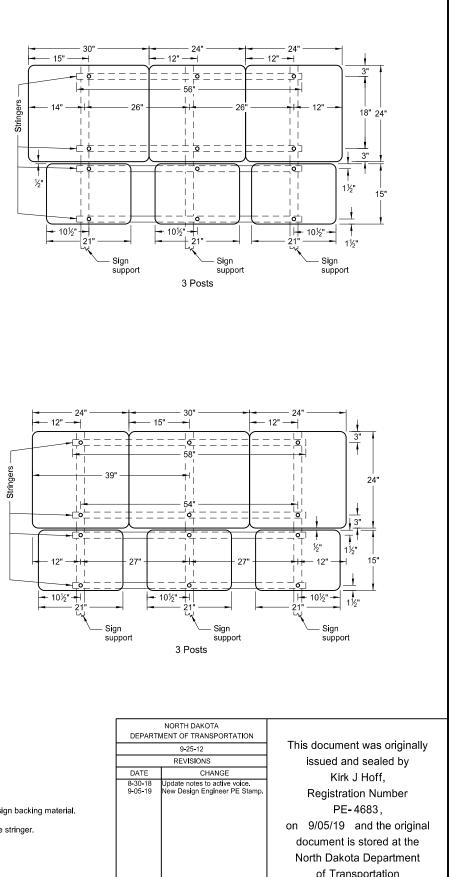

Notes:

1. Use 0.100 inch minimum thickness sign backing material.

2. Use 1½"x1½" perforated square tube stringer.

3. Punch holes round for  $\frac{3}{8}$ " bolt.

## D-754-65